

How to Enable Internet Sharing with a Video Phone

Steps:

1. Ensure a stable Internet connection (Aircard or Wi-Fi) on PC. Browse to a website.
2. Record your Internet connection speeds.
 - a. Check your Aircard or Wi-Fi upload speed at <http://www.speedtest.net>.
 - b. Check your Aircard or Wi-Fi voice and video capability at <http://speed.acndigital.net>.
3. Ensure you have administrative access to the PC.
4. Disable Firewall on PC.
5. Enable Internet Connection Sharing.
 - a. For Microsoft Vista, click [here](#).
 - b. For Microsoft XP, click [here](#).
 - c. For Apple MAC OS X, click [here](#).
6. Connect an Ethernet cable from the WAN port on your IRIS 3000 Videophone to the Ethernet port on the computer.
7. Power on the IRIS 3000.
8. Ensure Ethernet port status lights (yellow and green light) are lit on the WAN port of the IRIS 3000 Videophone.
 - a. If the WAN port is not lit, you will need a crossover Ethernet cable. A crossover Ethernet cable may be purchased at a computer/electronics store.
9. Wait for green register light on the video phone.
 - a. Your IRIS 3000 will get an IP address from your PC and register with ACN's network via the Aircard or Wi-Fi connection.
10. Configure your video phone's bandwidth settings according to the ACN Video Phone speed recommendations chart [here](#).
11. It may be necessary to adjust your IRIS 3000 Videophone's Frame Rate from High to Normal or Low to optimize video quality based on your Internet connection's stability.